


CS1000 Series

Push And Clinch Snaps


Description

Pronged 10mm socket or 10mm stud push and clinch snaps . Easily installs onto multi-layer rubber or vinyl. Provides a strong contact for table matting.

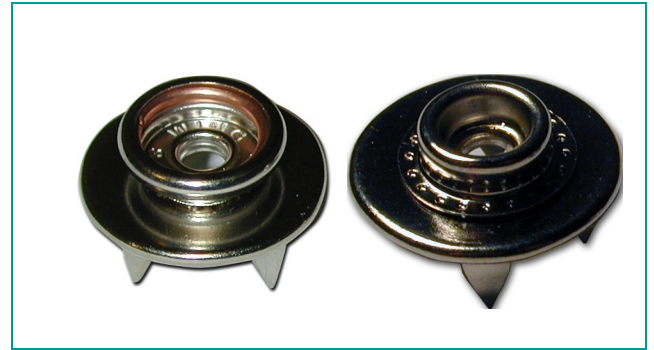


How to Install Clinch Snaps

1. Place ESD matting on workstation. Locate the safest, and most convenient grounding point (outlet).
2. Choose which side of the mat has the closest or most convenient access to the grounding point.
3. Locate an area 1 –2 inches in from each corner of the mat on the side that was determined in step 2.
4. Press snap downward until prongs puncture matting and are fully visible on the underside of the mat.
5. Bend the prongs of the snaps until flush against the underside of the mat.

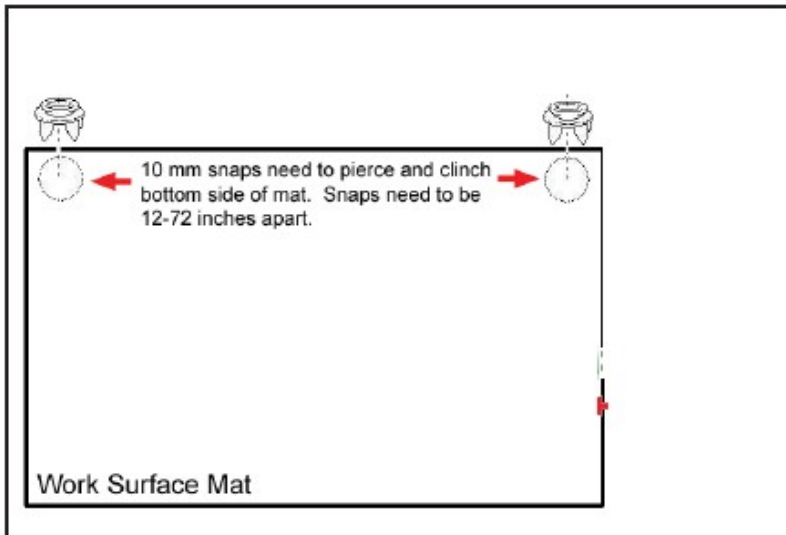

Product Numbers

<u>Item Number</u>	<u>Description</u>
CS1010	Clinch Snap, 10mm Female
CS1020	Clinch Snap, 10mm Male

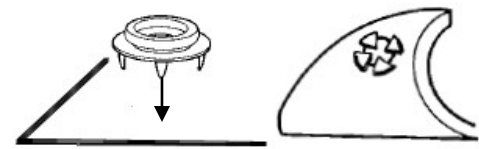

Installing push and clinch mat grounding snap.

This document is prepared for our customers as a service, and is to the best of our knowledge true and accurate. However, it is understood and agreed by the users of this document that we will accept no liability for the conclusions reached. Users of this document may therefore wish to perform additional testing before determining that products mentioned are suitable.



Transforming Technologies, LLC

3407 Silica Rd.
Sylvania, OH 43560

Phone: 1.419.841.9552

Fax: 1.419.841.3241

www.transforming-technologies.com

Outstanding Alternatives in Static Control